

Handrail Kits


SR-518 and SR-BLK518

Kit Instructions

SIMPLIFIED
BUILDING



simplifiedbuilding.co.uk

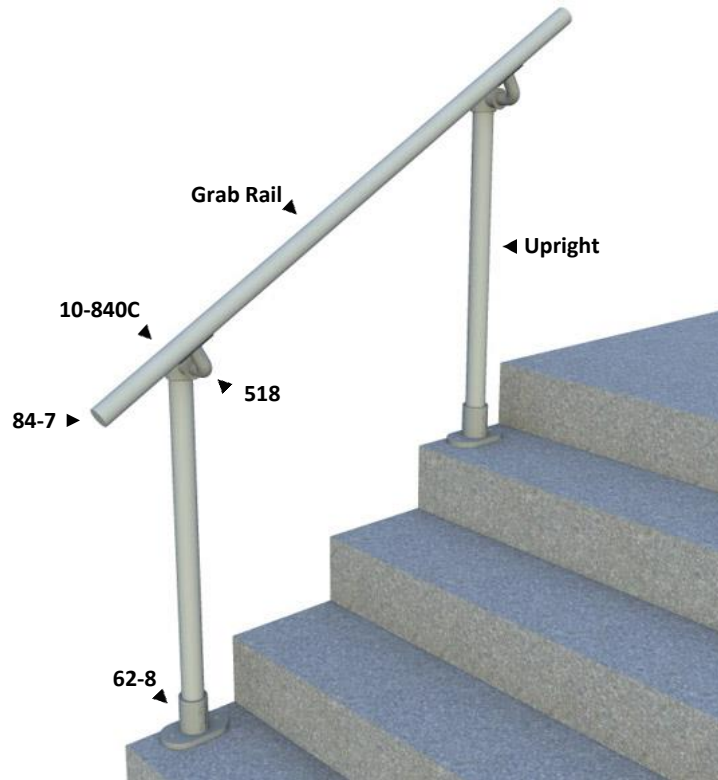

Parts

Surface 518 Parts

Qty Part

- 2 62-8 Standard Railing Flanges
- 2 10-840C Single Handrail Socket Capped
- 2 518 Handrail Brackets
- 2 84-7 Malleable Plugs
- 2 Uprights (Cut at 1 m)
- 1 Grab Rail (Cut at 1.5 m)
- 1 Allen Key

Tools

- Allen Key (included)
- Rubber Mallet/Hammer (for plugs)
- Drill/Hammer Drill
- Wrench

Hardware Included

- 4 x Throughbolts (Concrete/Brick)
- 4 x Coach screws (Wood)
- 4 x Self-Tapping Screws / Hex Roof Screws (Grab Rail)

Installation Tips

1. Confirm that you have all the required parts.
2. When installing plugs, place rag/cardboard over plug and hammer into place.
3. If installing into concrete/brick, vacuum out debris from drilled out holes before inserting anchor bolts.
4. If you plan on painting your rail, do so before assembling.
5. Be careful not to chip the coating when you drill into the black version of the rail. We will not be able to accept returned used or damaged rails (unless damaged in transit).

Step by Step

1. Insert uprights into 62-8's. Tighten set screws loosely.
2. Line up assembled posts to desired location. Test grab bar with posts, then mark holes for the 62-8's.
3. Disassemble the posts and secure 62-8's to surface.
4. Insert posts into 62-8's and add socket of 10-840C to top of posts. Insert 518's in 10-840C's. Tighten set screws loosely.
5. Line up grab rail at desired location. Mark and drill pilot holes for securing grab rail to 518's.
6. Attach grab rail with self-tapping screws and adjust as needed. Tighten set screws once complete.
7. Cover 84-7's with a rag or cardboard and hammer into place.

Questions or Installation Problems?

Customer Service | 01384 476 107