

# Simple Rail

## SR-518/570

### Kit Instructions

## Parts

### Qty Part

- 1 62-8 Standard Railing Flange
- 1 10-840C Single Handrail Socket Capped
- 1 518-7 Handrail Bracket
- 1 570-7 Wall Mounted Handrail
- 2 84-7 Malleable Plug
- 1 Post (Cut @ 1000mm)
- 1 Grab Rail
- 1 Allen Key

## Tools


- Allen Key (included)
- Rubber Mallet/Hammer (for plugs)
- Drill/Hammer Drill
- Wrench

## Hardware (Not included)

- 4 x Sleeve Anchors (For flange on Concrete/ Brick floor)
- 4 x Coach Screws (For flange on Wood floor)
- 3 x Masonry Screws (For Concrete/Brick wall)
- 3 x Lag Screws (For Wood wall)
- 4 x Self-Tapping Screws (Grab Rail)

## Installation Tips

1. Confirm that you have all the required parts.
2. When installing plugs, place rag or cardboard over plug and gently hammer into place.
3. If installing into concrete or brick, vacuum out debris from drilled out holes before inserting sleeve anchors.
4. If you plan on painting your rail, do so before assembling.

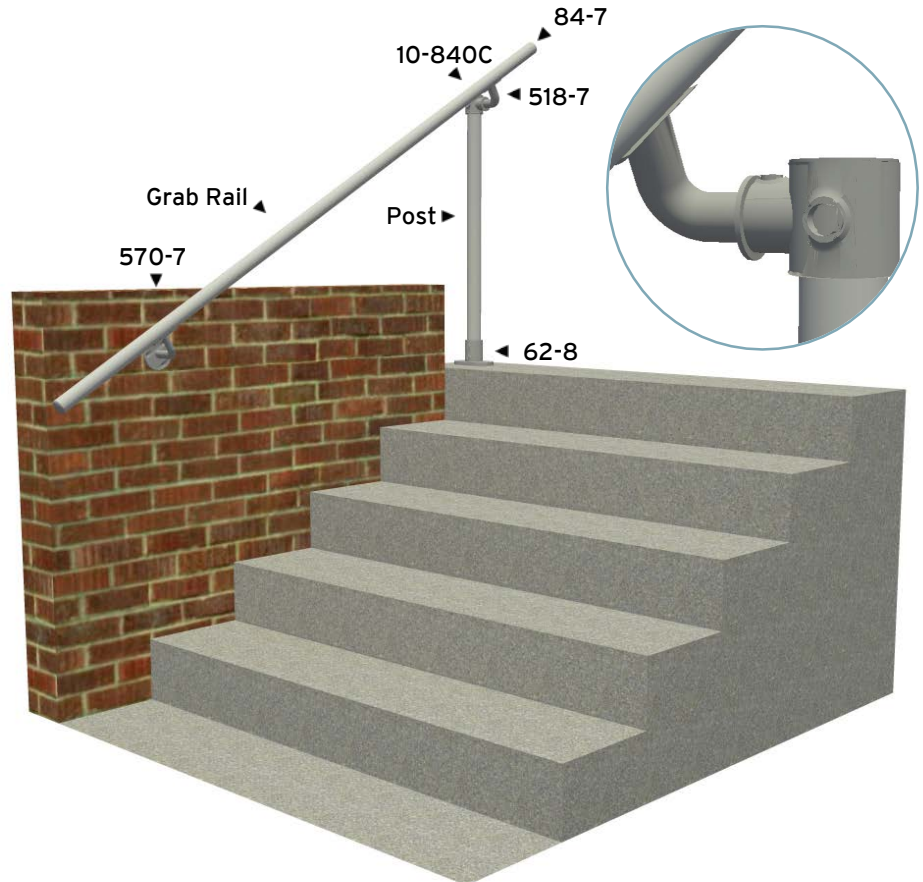

## Step by Step

1. Insert post into 62-8. Tighten set screws loosely.
2. Line up assembled post to desired location. Test grab rail with post, then mark holes for the 62-8 and 570-7.
3. Disassemble the post and drill the holes for the 62-8 and 570-7. Secure 62-8 to surface and 570-7 to wall with relevant hardware.
4. Insert post into 62-8 and add socket of 10-840C to top of post. Insert 518-7 in 10-840C. Tighten set screws loosely.
5. Line up grab rail at desired location on post and brace it on 570-7 on wall. Mark and drill pilot holes for securing grab rail to 518-7 and 570-7.
6. Attach grab rail to post and wall mount with self-tapping screws. Adjust as needed. Tighten all set screws once complete.
7. Cover 84-7 with a rag or cardboard and gently hammer into place.

## Questions or Installation Problems?

Customer Service | 01384 476 107