

Simple Rail

SR-518/C58

Kit Instructions

Parts

Qty Part

- 1 62-8 Standard Railing Flange
- 1 C58 Base Plate
- 1 10-840C Single Handrail Socket Capped
- 1 518-7 Handrail Bracket
- 1 84-7 Malleable Plug
- 1 Post (Cut @ 1000mm)
- 1 Grab Rail
- 1 Allen Key

Tools


- Allen Key (included)
- Rubber Mallet/Hammer (for plugs)
- Drill/Hammer Drill
- Wrench

Hardware (Not included)

- 2 x Sleeve Anchors (For ground installation on Concrete/Brick)
- 2 x Coach Screws (For ground installation on Wood)
- 2 x Masonry Screws (For wall installation on Concrete/Brick)
- 2 x Coach Screws (For wall installation on Wood)
- 4 x Self-Tapping Screws (For Grab Rail)

Installation Tips

1. Confirm that you have all the required parts.
2. When installing plugs, place rag or cardboard over plug and gently hammer into place.
3. If installing into concrete or brick, vacuum out debris from drilled out holes before inserting sleeve anchors.
4. If you plan on painting your rail, do so before assembling.

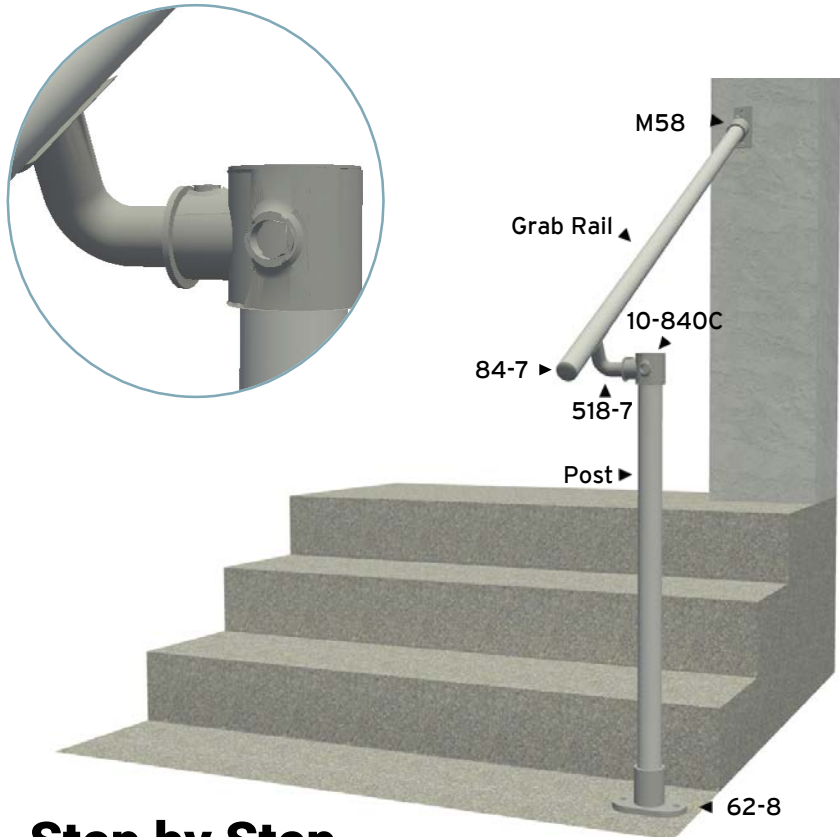

Step by Step

1. Insert post into 62-8. Tighten set screws loosely.
2. Line up assembled post to desired location. Test grab rail with post, then mark holes for the 62-8 and C58.
3. Disassemble the post and drill the holes for the 62-8 and C58. Secure 62-8 to surface and C58 to wall with included hardware.
4. Insert post into 62-8 and add socket of 10-840C to top of post. Insert 518-7 in 10-840C. Tighten set screws loosely.
5. Line up grab rail at desired location on post and insert other end into F50-7 on wall. Mark and drill pilot holes for securing grab rail to 518-7.
6. Attach grab rail to post with self-tapping screws and insert other end into F50-7 on wall. Adjust as needed. Tighten set screws once complete.
7. Cover 84-7 with a rag or cardboard and gently hammer into place.

Questions or Installation Problems?

Customer Service | 0121 2815 583