

Simple Rail

SR-567

Kit Instructions

Parts

Qty Part

- 2 62-8 Standard Railing Flanges
- 2 10-840C Single Handrail Socket Caps
- 2 567 End Post Handrail Returns Posts (Cut @ 1000mm)
- 2 Grab Rail
- 1 99-7 Allen Key

Tools


- Allen Key (included)
- Drill/Hammer Drill
- Wrench

Fixings

- 4 x Sleeve Anchors (Concrete/Brick)
- 4 x Coach Screws (Wood)

Installation Tips

1. Confirm that you have all the required parts.
2. When installing plugs, place rag or cardboard over plug and gently hammer into place.
3. If installing into concrete or brick, vacuum out debris from drilled out holes before inserting sleeve anchors.
4. If you plan on painting your rail, do so before assembling.

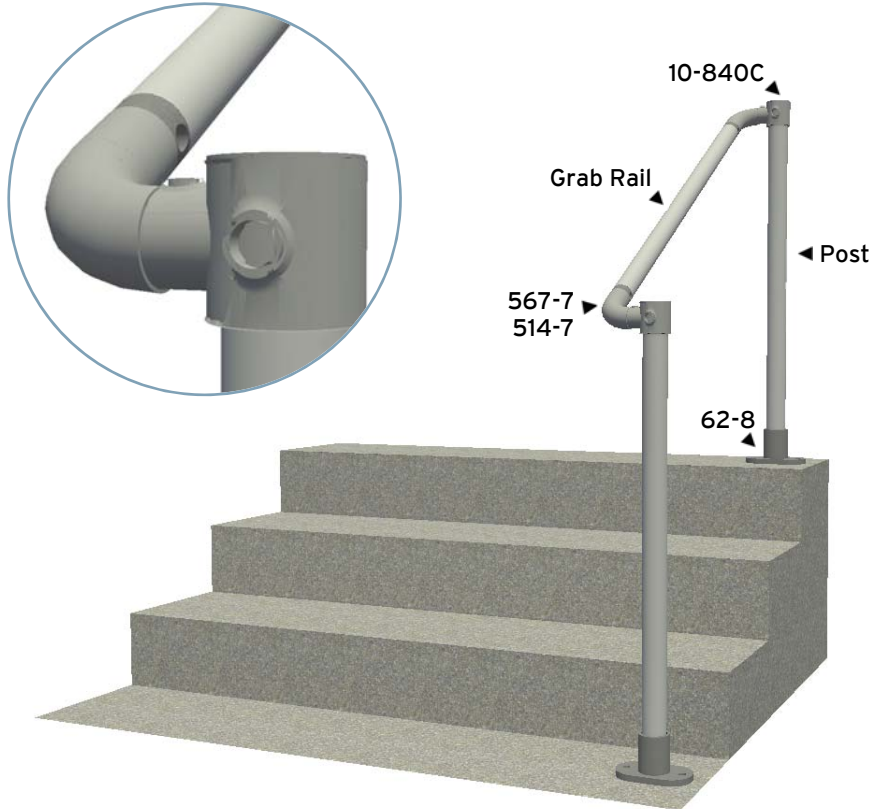

Step by Step

1. Insert posts into 62-8's. Tighten set screws loosely.
2. Line up assembled posts to desired location. Test grab rail with posts, then mark holes for the 62-8's.
3. Disassemble the posts and drill the holes for the 62-8's. Secure 62-8's to surface with included hardware.
4. Insert posts into 62-8's and add socket of 10-840C to top of posts. Insert one side of 567's in 10-840C's. Tighten set screws loosely.
5. Insert internal couplings into the grab rail and the other side of 567's. Tighten the set screws on the internal couplings to secure grab rail.
6. Adjust as needed. Tighten set screws fully once complete.

Questions or Installation Problems?

Customer Service | 01384 476 107