

Simple Rail

SRL-29

Kit Instructions

Parts

Qty Part

- 3 62-7 Standard Railing Flanges
- 1 29-7 30-60 Degree Single Socket Tee
- 1 325-7 Level to Slope Down Tee 30-45 Degree
- 1 10-7 Single Socket Tee
- 2 84-7 Malleable Plugs
- 3 Posts (Cut @ 1000mm)
- 1 Sloped Grab Rail
- 1 Landing Grab Rail
- 1 Allen Key

Tools


- Allen Key (included)
- Rubber Mallet/Hammer (for plugs)
- Drill/Hammer Drill
- Wrench

Hardware (not included)

- 8 x Sleeve Anchors (Concrete/Brick)
- 8 x Coach Screws (Wood)

Installation Tips

1. Confirm that you have all the required parts.
2. When installing plugs, place rag or cardboard over plug and gently hammer into place.
3. If installing into concrete or brick, vacuum out debris from drilled out holes before inserting sleeve anchors.
4. If you plan on painting your rail, do so before assembling.

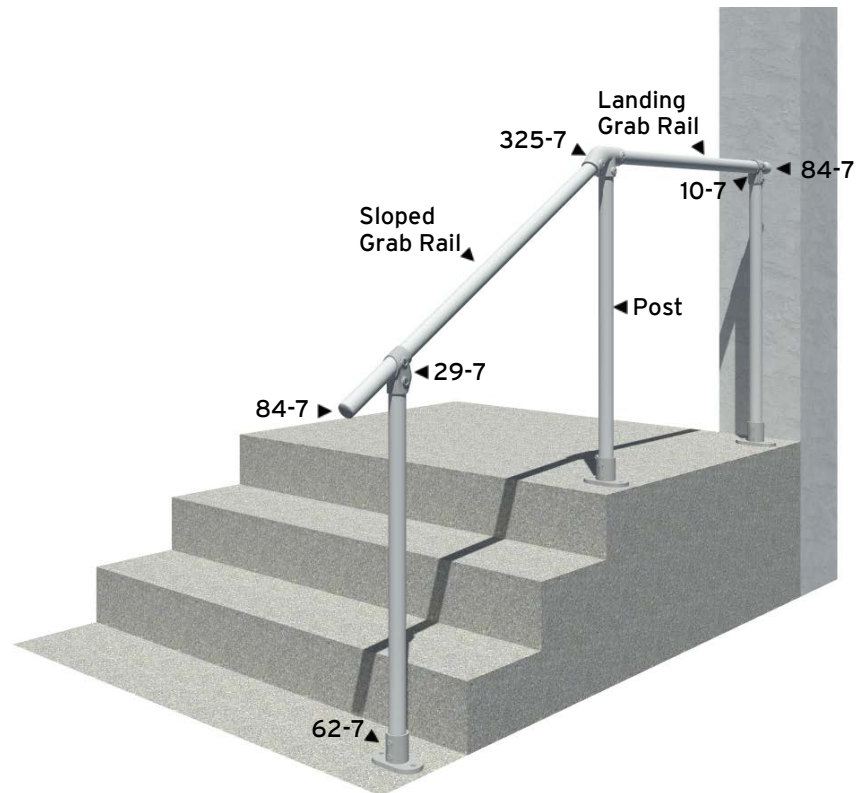

Step by Step

1. Insert posts into 62-7's. Tighten set screws loosely.
2. Line up assembled posts to desired location. Test grab rail with posts, then mark holes for the 62-7's.
3. Disassemble the posts and drill the holes for the 62-7's. Secure 62-7's to surface with included hardware.
4. Insert posts into 62-7's and add socket of 29-7, 325-7, and 10-7 to top of posts. Tighten set screws loosely.
5. Before installing the landing grab rail, cover 84-7 with a rag or cardboard and gently hammer into place.
6. Slide the grab rail through the 29-7, 325-7, and 10-7 at desired location. Tighten all set screws once complete.
7. Cover 84-7 with a rag or cardboard and gently hammer into place at the end of the handrail.

Questions or Installation Problems?

Customer Service | 0121 2815 583