

Simple Rail

SRL-518

Kit Instructions

Parts

Qty Part

3	62-8 Standard Railing Flanges
3	10-840C Single Handrail Socket Caps
3	518-7 Handrail Brackets
1	554-7 Variable Angle
2	514-7 Internal Couplings
2	84-7 Malleable Plugs
3	Uprights (Cut @ 1000mm)
1	Sloped Grab Rail
1	Landing Grab Rail
1	Allen Key

Tools


- Allen Key (included)
- Rubber Mallet/Hammer (for plugs)
- Drill/Hammer Drill
- Wrench

Hardware (not included)

- 8 x Sleeve Anchors (Concrete/Brick)
- 8 x Coach Screws (Wood)
- 8 x Self-Tapping Screws (for Grab Rail)

Installation Tips

1. Confirm that you have all the required parts.
2. When installing plugs, place rag or cardboard over plug and gently hammer into place.
3. If installing into concrete or brick, vacuum out debris from drilled out holes before inserting sleeve anchors.
4. If you plan on painting your rail, do so before assembling.

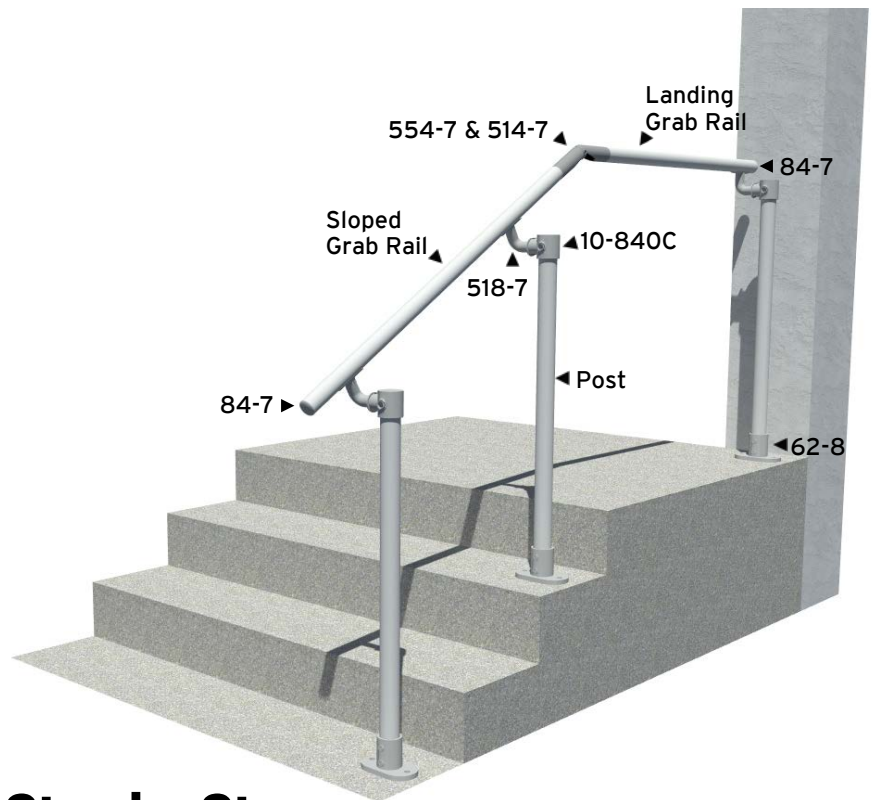

Step by Step

1. Insert posts into 62-8's. Tighten set screws loosely.
2. Loosely tighten the 554-7 Variable Angle to the two grab rails using the 514-7's.
3. Line up assembled posts to desired location. Test grab rails with posts, then mark holes for the 62-8's.
4. Disassemble the posts and drill the holes for the 62-8's. Secure 62-8's to surface with included hardware.
5. Insert posts into 62-8's and add socket of 10-840C to top of posts. Insert 518's in 10-840C's. Tighten set screws loosely.
6. Before installing the landing grab rail, cover 84-7 with a rag or cardboard and gently hammer into place.
7. Line up grab rails at desired location. Mark and drill pilot holes for securing grab rail to 518's.
8. Attach grab rails with self-tapping screws and adjust as needed. Tighten all set screws once complete.
9. Cover 84-7 for the sloped grab rail with a rag or cardboard and gently hammer into place.

Questions or Installation Problems?

Customer Service | 01384 476 107