


Hardware Instructions

SIMPLIFIED
BUILDING



simplifiedbuilding.co.uk

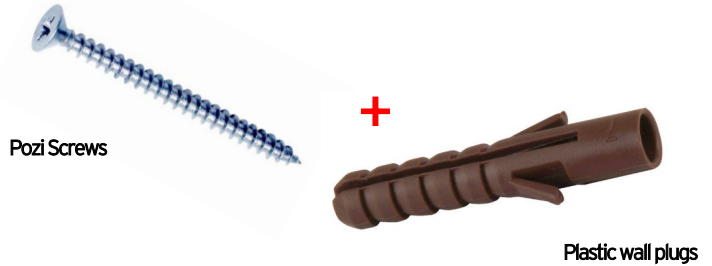

Option 4

Mount the C58 Base Plate to concrete and brick walls

Combination Coach screws + Universal plugs

Coach screws (M12 x 65)

Length: 65 mm

Thread: M12

Qty needed: 4

Nylon UX universal plug (12 mm)

Diameter: 12 mm

Suitable for:

Material:



Fitting:



Option 5

Mount the C58 Base Plate to a wooden wall

Combination Pozi screws + Wall plugs

Multi purpose Pozi screws (5.0 x 50 mm)

Length: 50 mm

Qty needed: 3

Plastic contract wall plug

Diameter: 7 mm

Suitable for:

Material:



Fitting:



Questions or Installation Problems?

Call Customer Service 01384 476 107

Disclaimer: Connecting hardware is NOT included with our kits. Use these instructions as general guidance only. If you have any questions, we encourage you to contact us or a professional engineer.

Hardware Instructions

SIMPLIFIED
BUILDING



simplifiedbuilding.co.uk

What do the icons mean?

Materials



- Wood



- Brick



- Concrete



- Galvanised steel

Fittings



- 62 Handrail footing (flange)



- 518 Handrail bracket



- 570 Wall mounted handrail bracket



- C58 Swivel flange

Questions or Installation Problems?

Call Customer Service 01384 476 107

Disclaimer: Connecting hardware is NOT included with our kits. Use these instructions as general guidance only. If you have any questions, we encourage you to contact us or a professional engineer.